

The Strivr Immersive Learning system contains the following components in a portable tray:


1. VR headsets and controllers
2. A Management Device, which receives training content and reports training results to and from Strivr
3. A USB hub, to which the Management Device and VR headsets are connected

Charging the Headset

After receiving the system, check that all cords are firmly connected. Move the tray to a power outlet and plug in both power cords for at least two hours to fully charge the headset. When the headset light is green, it is fully charged.

Wiring Diagram

System cables are routed underneath the foam inserts. Access the cables by opening the access panel on the underside of the tray with a Philips screwdriver.

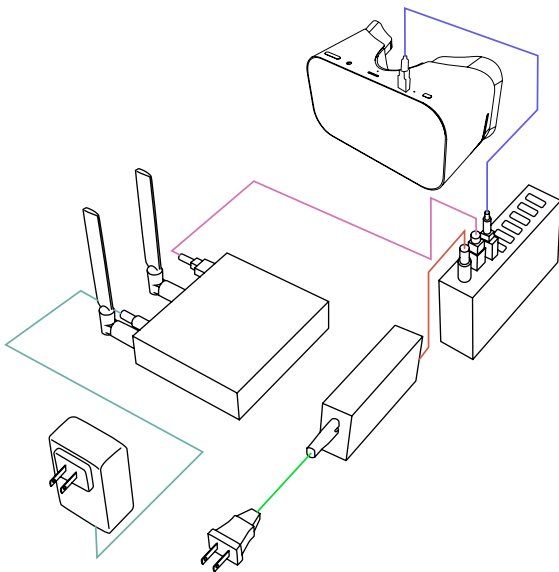

Connecting the System

The Strivr Immersive Learning system must be connected to the Internet via ethernet cable or LTE modem to receive updated content.

Ethernet cable

Connect an ethernet cable to the rear of the Management Device.



LTE Modem

Plug the LTE modem into a USB port on the front side of the Management Device.



Reminders

1. Log in with your correct credentials inside the headset to receive credit for training.
2. Log out when finished with your last experience of the session.
3. Clean and disinfect headsets and controllers between every training session.
4. When finished with the last training session of the day, return the headsets to the tray and connect them to the charging cables.